

## show network-access aaa statistics authentication

---

<b>Syntax</b>	show network-access aaa statistics authentication
<b>Release Information</b>	Statement introduced in JUNOS Release 9.0 for EX-series switches.
<b>Description</b>	Display authentication, authorization, and accounting (AAA) authentication statistics.
<b>Required Privilege Level</b>	view
<b>Related Topics</b>	<ul style="list-style-type: none"><li>■ authentication-server</li><li>■ Example: Connecting a RADIUS Server for 802.1X to an EX-series Switch</li></ul>
<b>List of Sample Output</b>	show network-access aaa statistics authentication on page 1
<b>Output Fields</b>	Table 1 on page 1 lists the output fields for the show network-access aaa statistics authentication command. Output fields are listed in the approximate order in which they appear.

**Table 1: show network-access aaa statistics authentication Output Fields**

Field Name	Field Description
Requests received	The number of authentication requests received by the switch.
Accepts	The number of authentication accepts received by the RADIUS server.
Rejects	The number authentication rejects sent by the RADIUS server.
Challenges	The number of authentication challenges sent by the RADIUS server.

```
show network-access aaa statistics authentication
user@switch> show network-access aaa statistics authentication
Authentication module statistics
Requests received: 2
Accepts: 1
Rejects: 0
Challenges: 1
```

