

show virtual-chassis status

Syntax	show virtual-chassis status
Release Information	Command introduced in JUNOS Release 9.0 for EX-series switches.
Description	Display information about all the members of the Virtual Chassis configuration.
Options	none—Display all information for all member switches of the Virtual Chassis configuration.
Required Privilege Level	view
Related Topics	<ul style="list-style-type: none">■ Monitoring Virtual Chassis Configuration Status and Statistics■ Understanding Virtual Chassis Configuration
Output Fields	Table 1 on page 1 lists the output fields for the show virtual-chassis command. Output fields are listed in the approximate order in which they appear.

Table 1: show virtual-chassis Output Fields

Field Name	Field Description
Virtual Chassis ID	Assigned ID that applies to the entire Virtual Chassis configuration.
Member ID	Assigned member ID and FPC slot (from 0 through 9).
Status	<p>For a nonprovisioned configuration:</p> <ul style="list-style-type: none">■ Prsnt for a member that is currently connected to the Virtual Chassis configuration■ NotPrsnt for a member ID that has been assigned but is not currently connected <p>For a preprovisioned configuration:</p> <ul style="list-style-type: none">■ Prsnt for a member that is specified in the preprovisioned configuration file and is currently connected to the Virtual Chassis configuration.■ Unprvsnd for a member that is interconnected with the Virtual Chassis configuration, but is not specified in the preprovisioned configuration file.
Serial No	Serial number of the member switch.
Model	Model number of the member switch.
Mastership Priority	Mastership priority value of the member switch.
Role	Role of the member switch.
Neighbor List	Member ID of the neighbor member to which this member's VCP interface is connected.

show virtual-chassis status user@SWA-0> **show virtual-chassis status**

```

Virtual Chassis ID: 0019.e250.47a0

Member ID  Status  Serial No  Model  Mastership  Role  Neighbor List
          ID      priority
0 (FPC 0)  Prsnt   AK0207360276  ex4200-24t    249  Master*  8 vcp-0
                                     1 vcp-1
1 (FPC 1)  Prsnt   AK0207360281  ex4200-24t    248  Backup   0 vcp-0
                                     2 vcp-1
2 (FPC 2)  Prsnt   AJ0207391130  ex4200-48p    247  Linecard 1 vcp-0
                                     3 vcp-1
3 (FPC 3)  Prsnt   AK0207360280  ex4200-24t    246  Linecard 2 vcp-0
                                     4 vcp-1
4 (FPC 4)  Prsnt   AJ0207391113  ex4200-48p    245  Linecard 3 vcp-0
                                     5 vcp-1
5 (FPC 5)  Prsnt   BP0207452204  ex4200-48t    244  Linecard 4 vcp-0
                                     6 vcp-1
6 (FPC 6)  Prsnt   BP0207452222  ex4200-48t    243  Linecard 5 vcp-0
                                     7 vcp-1
7 (FPC 7)  Prsnt   BR0207432028  ex4200-24f    242  Linecard 6 vcp-0
                                     8 vcp-1
8 (FPC 8)  Prsnt   BR0207431996  ex4200-24f    241  Linecard 7 vcp-0
                                     0 vcp-1

Member ID for next new member: 9 (FPC 9)

```