

show virtual-chassis vc-port statistics

Syntax	show virtual-chassis vc-port statistics member <i>member-id</i>
Release Information	Command introduced in JUNOS Release 9.0 for EX-series switches.
Description	Display the traffic statistics of the Virtual Chassis ports for the selected Virtual Chassis member.
Options	member <i>member-id</i> —Display the traffic statistics for the Virtual Chassis ports of the specified Virtual Chassis member.
Required Privilege Level	view
Related Topics	<ul style="list-style-type: none">■ clear virtual-chassis vc-port statistics■ show virtual-chassis vc-port■ Monitoring Virtual Chassis Configuration Status and Statistics
List of Sample Output	show virtual-chassis vc-port statistics member 0 on page 1
Output Fields	Table 1 on page 1 lists the output fields for the show virtual-chassis vc-port statistics command. Output fields are listed in the approximate order in which they appear.

Table 1: show virtual-chassis vc-port statistics Output Fields

Field Name	Field Description
Member ID	ID of the specified member.
Port	RX (Receive) and TX (Transmit) statistics reported by the VCP subsystem for internal ports and for the dedicated VCPs (vcp-0 and vcp-1).

```
show virtual-chassis vc-port statistics member 0
user@SWA-0>show virtual-chassis vc-port statistics member 0
Member ID: 0  Port: internal-0/24
                RX                TX
Total octets:      0                0
Total packets:     0                0

Member ID: 0  Port: internal-0/27
                RX                TX
Total octets:      0                0
Total packets:     0                0

Member ID: 0  Port: internal-1/25
                RX                TX
Total octets:      0                0
Total packets:     0                0
```

Member ID: 0	Port: internal-1/26		
		RX	TX
Total octets:	0		0
Total packets:	0		0
Member ID: 0	Port: vcp-0		
		RX	TX
Total octets:	586511032		210691704
Total packets:	2927355		1987210
Member ID: 0	Port: vcp-1		
		RX	TX
Total octets:	0		0
Total packets:	0		0