

## description

---

<b>Syntax</b>	description <i>text</i> ;
<b>Hierarchy Level</b>	[edit interfaces <i>ge-chassis/slot/port</i> ]
<b>Release Information</b>	Statement introduced in JUNOS Release 9.0 for EX-series switches.
<b>Description</b>	Provide a textual description of the interface or the logical unit. Any descriptive text you include is displayed in the output of the show interfaces commands, and is also exposed in the ifAlias Management Information Base (MIB) object. It has no effect on the operation of the interface or the switch.
<b>Default</b>	No textual description is configured
<b>Options</b>	<i>text</i> —Text to describe the interface. If the text includes spaces, enclose the entire text in straight quotation marks.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Topics</b>	<ul style="list-style-type: none"><li>■ Configuring Interfaces on EX-series Switches (CLI Procedure)</li><li>■ Configuring Gigabit Ethernet Interfaces (J-Web Procedure)</li><li>■ <i>JUNOS Software Network Interfaces Configuration Guide</i> at <a href="http://www.juniper.net/techpubs/software/junos/junos90/index.html">http://www.juniper.net/techpubs/software/junos/junos90/index.html</a></li></ul>

