

disable

Syntax disable;

Hierarchy Level [edit protocols gvrp],
[edit protocols gvrp interface *[interface-name]*]

Release Information Statement introduced in JUNOS Release 9.0 for EX-series switches.



NOTE: As of JUNOS Release 9.2, GVRP can be enabled only on trunk interfaces.

Description Disable the GVRP configuration on the interface.

Default If you do not configure GVRP, it is disabled. You can use this command to disable a prior configuration of GVRP on a specified interface.

Required Privilege Level routing—To view this statement in the configuration.
routing-control—To add this statement to the configuration.

Related Topics ■ show gvrp
 ■ Example: Configure Automatic VLAN Administration Using GVRP

