

## disable

---

<b>Syntax</b>	disable;
<b>Hierarchy Level</b>	[edit poe interface (all   <i>interface-name</i> )], [edit poe interface (all   <i>interface-name</i> ) telemetries]
<b>Release Information</b>	Statement introduced in JUNOS Release 9.0 for EX-series switches.
<b>Description</b>	<p>Disables the PoE capabilities of this port. The port operates as a standard network access port. If the disable statement is specified after the telemetries statement, it disables the logging of PoE power consumption for this port.</p> <p>To disable the monitoring and retain the stored configuration values for interval and duration for possible future use, you can specify the disable substatement in the stanza for telemetries.</p>
<b>Default</b>	The PoE capabilities are automatically enabled when a PoE interface is set. If the telemetries statement is specified, monitoring of PoE per-port power consumption is enabled.
<b>Required Privilege Level</b>	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
<b>Related Topics</b>	<ul style="list-style-type: none"><li>■ Example: Configuring PoE Interfaces on an EX-series Switch</li><li>■ Example: Configuring PoE Interfaces with Different Priorities on an EX-series Switch</li><li>■ Configuring PoE (CLI Procedure)</li><li>■ Configuring PoE (J-Web Procedure)</li><li>■ PoE and EX-series Switches Overview</li></ul>

