

## disable

---

<b>Syntax</b>	disable;
<b>Hierarchy Level</b>	[edit protocols mstp], [edit protocols mstp interface <i>interface-name</i> ], [edit protocols mstp msti <i>msti-id</i> vlan ( <i>vlan-id</i>   <i>vlan-name</i> ) interface <i>interface-name</i> ], [edit protocols rstp], [edit protocols rstp interface <i>interface-name</i> ], [edit protocols stp], [edit protocols stp interface <i>interface-name</i> ], [edit protocols vstp], [edit protocols vstp vlan <i>vlan-id</i> interface (all   <i>interface-name</i> )]
<b>Release Information</b>	Statement introduced in JUNOS Release 9.0 for EX-series switches. Statement updated in JUNOS Release 9.4 for EX-series switches to add VSTP support.
<b>Description</b>	Disable STP, MSTP, RSTP, or VSTP on the switch or on a specific interface.
<b>Required Privilege Level</b>	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
<b>Related Topics</b>	<ul style="list-style-type: none"><li>■ show spanning-tree bridge</li><li>■ show spanning-tree interface</li><li>■ Example: Configuring Network Regions for VLANs with MSTP on EX-series Switches</li><li>■ Example: Configuring Faster Convergence and Improving Network Stability with RSTP on EX-series Switches</li><li>■ Understanding MSTP for EX-series Switches</li><li>■ Understanding STP for EX-series Switches</li><li>■ Understanding VSTP for EX-series Switches</li></ul>

