

## dot1q-tunneling

---

**Syntax** dot1q-tunneling {  
ether-type (0x8100 | 0x88a8 | 0x9100);  
}

**Hierarchy Level** [edit ethernet-switching-options]

**Release Information** Statement introduced in JUNOS Release 9.3 for EX-series switches. The remaining statement is explained separately.

**Description** Set a global value for the Ethertype for Q-in-Q tunneling.

**Required Privilege Level** routing—To view this statement in the configuration.  
routing-control—To add this statement to the configuration.

**Related Topics**

- dot1q-tunneling
- Example: Setting Up Q-in-Q Tunneling on EX-series Switches
- Configuring Q-in-Q Tunneling (CLI Procedure)

