

flow-control

Syntax	(flow-control no-flow-control);
Hierarchy Level	[edit interfaces <i>interface-name</i> ether-options]
Release Information	Statement introduced in JUNOS Release 9.0 for EX-series switches.
Description	<p>Explicitly enable flow control, which regulates the flow of packets from the switch to the remote side of the connection, or disable it.</p> <ul style="list-style-type: none">■ flow-control—Enable flow control is useful when the remote device is a Gigabit Ethernet switch.■ no-flow-control—Disable flow control.
Default	Flow control enabled.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Topics	<ul style="list-style-type: none">■ Configuring Interfaces on EX-series Switches (CLI Procedure)■ Configuring Gigabit Ethernet Interfaces (J-Web Procedure)■ <i>JUNOS Software Network Interfaces Configuration Guide</i> at http://www.juniper.net/techpubs/software/junos/junos90/index.html

