

## gvrp

---

**Syntax**    gvrp {  
              interface [*interface-name*] {  
                  disable;  
              }  
              join-timer *milliseconds*;  
              leave-timer *milliseconds*;  
              leaveall-timer *milliseconds*;  
              }

**Hierarchy Level**    [edit protocols]

**Release Information**    Statement introduced in JUNOS Release 9.0 for EX-series switches.



**NOTE:** As of JUNOS Release 9.2, GVRP can be enabled only on trunk interfaces.

---

**Description**    When GVRP is configured on a trunk interface, it ensures that the VLAN membership information on the trunk interface is updated as the switch's access interfaces become active or inactive in the configured VLANs.

The statements are explained separately.

**Default**    GVRP is disabled by default.

**Required Privilege Level**    routing—To view this statement in the configuration.  
                                  routing-control—To add this statement to the configuration.

**Related Topics**    ■    show gvrp  
                          ■    Example: Setting Up Bridging with Multiple VLANs for EX-series Switches  
                          ■    Example: Configure Automatic VLAN Administration Using GVRP

