

interface

Syntax	interface <i>interface-name</i> [upto <i>upto-interface-name</i>] [exclude];
Hierarchy Level	[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> system services dhcp-local-server group <i>group-name</i>], [edit logical-systems <i>logical-system-name</i> system services dhcp-local-server group <i>group-name</i>], [edit routing-instances <i>routing-instance-name</i> system services dhcp-local-server group <i>group-name</i>], [edit system services dhcp-local-server group <i>group-name</i>]
Release Information	Statement introduced in JUNOS Release 9.0. upto and exclude options introduced in JUNOS Release 9.1.
Description	Specify one or more interfaces, or a range of interfaces, that are within a specified group on which the DHCP local server is enabled. You can repeat the interface <i>interface-name</i> statement to specify multiple interfaces within a group, but you cannot specify the same interface in more than one group. Also, you cannot use an interface that is being used by the DHCP relay agent.
Options	exclude —Exclude an interface or a range of interfaces from the group. <i>interface-name</i> —The name of the interface. You can repeat this keyword multiple times. <i>upto-interface-name</i> —The upper end of the range of interfaces; the lower end of the range is the <i>interface-name</i> entry. The interface device name of the <i>upto-interface-name</i> must be the same as the device name of the <i>interface-name</i> .
Required Privilege Level	system—To view this statement in the configuration. system-control—To add this statement to the configuration.
Related Topics	<ul style="list-style-type: none">■ Extended DHCP Local Server Overview■ Using External AAA Authentication Services with DHCP

