

lACP

Syntax `lACP mode {
 periodic interval;
 }`

Hierarchy Level [edit interfaces *ae-chassis/slot/port* aggregated-ether-options]

Release Information Statement introduced in JUNOS Release 9.0 for EX-series switches.

Description Configure the Link Aggregation Control Protocol (LACP).

Default LACP is not enabled.

Options *mode* —LACP mode:

- *active*—Initiate transmission of LACP packets
- *passive*—Respond to LACP packets

The remaining statement is explained separately.

Required Privilege Level interface—To view this statement in the configuration.
 interface-control—To add this statement to the configuration.

- Related Topics**
- *JUNOS Software Network Interfaces Configuration Guide* at <http://www.juniper.net/techpubs/software/junos/junos90/index.html>
 - Example: Configuring Aggregated Ethernet High-Speed Uplinks with LACP Between a Virtual Chassis Access Switch and a Virtual Chassis Distribution Switch
 - Configuring Aggregated Ethernet LACP (CLI Procedure)
 - Configuring Link Aggregation (J-Web Procedure)
 - Understanding Aggregated Ethernet Interfaces and LACP

