

## leave-timer

---

<b>Syntax</b>	leave-timer <i>milliseconds</i> ;
<b>Hierarchy Level</b>	[edit protocols gvrp]
<b>Release Information</b>	Statement introduced in JUNOS Release 9.0 for EX-series switches.
<b>Description</b>	For GARP VLAN Registration Protocol (GVRP), configure the number of milliseconds an interface must wait after receiving a leave message to remove the interface from the VLAN specified in the message. If the interface receives a join message before the timer expires, the software keeps the interface in the VLAN.
<b>Default</b>	60 centiseconds
<b>Options</b>	<i>milliseconds</i> —Number of milliseconds. At a minimum, the leave timer interval should be twice the join timer interval. <b>Default:</b> 60 centiseconds
<b>Required Privilege Level</b>	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
<b>Related Topics</b>	<ul style="list-style-type: none"><li>■ show gvrp</li><li>■ Example: Configure Automatic VLAN Administration Using GVRP</li></ul>

