

leaveall-timer

Syntax	leaveall-timer <i>milliseconds</i> ;
Hierarchy Level	[edit protocols gvrp]
Release Information	Statement introduced in JUNOS Release 9.0 for EX-series switches.
Description	For GARP VLAN Registration Protocol (GVRP), configure the interval at which Leave All messages are sent on the interfaces. Leave All messages maintain current GVRP VLAN membership information in the network. A Leave All message instructs the port to change the GVRP state for all its VLANs to a leaving state and remove them unless a Join message is received before the leave timer expires.
Default	1000 centiseconds
Options	<i>milliseconds</i> —Number of milliseconds. Range: 5 times leave-timer value Default: 1000 centiseconds
Required Privilege Level	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
Related Topics	<ul style="list-style-type: none">■ show gvrp■ Example: Configure Automatic VLAN Administration Using GVRP

