

## password

---

<b>Syntax</b>	<code>password <i>password-string</i>;</code>
<b>Hierarchy Level</b>	<code>[edit forwarding-options dhcp-relay authentication],</code> <code>[edit forwarding-options dhcp-relay group <i>group-name</i> authentication],</code> <code>[edit logical-systems <i>logical-system-name</i> forwarding-options dhcp-relay authentication],</code> <code>[edit logical-systems <i>logical-system-name</i> forwarding-options dhcp-relay group <i>group-name</i></code> <code>authentication],</code> <code>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i></code> <code>forwarding-options dhcp-relay authentication],</code> <code>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i></code> <code>forwarding-options dhcp-relay group <i>group-name</i> authentication],</code> <code>[edit routing-instances <i>routing-instance-name</i> forwarding-options dhcp-relay</code> <code>authentication],</code> <code>[edit routing-instances <i>routing-instance-name</i> forwarding-options dhcp-relay group</code> <code><i>group-name</i> authentication]</code>
<b>Release Information</b>	Statement introduced in JUNOS Release 9.1.
<b>Description</b>	Configure the password that is sent to the external AAA authentication server for subscriber authentication.
<b>Options</b>	<i>password-string</i> —Authentication password.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Topics</b>	■ Using External AAA Authentication Services with DHCP

