

## storm-control

---

**Syntax** storm-control {  
    interface (all | *interface-name*) {  
        level *level*;  
        no-broadcast;  
        no-unknown-unicast;  
    }  
}

**Hierarchy Level** [edit ethernet-switching-options]

**Release Information** Statement introduced in JUNOS Release 9.1 for EX-series switches.

**Description** Apply storm control to all interfaces or to the specified interfaces.

The statements are explained separately.

**Default** Storm control is disabled.

**Required Privilege Level** routing—To view this statement in the configuration.  
routing-control—To add this statement to the configuration.

- Related Topics**
- Example: Configuring Storm Control to Prevent Network Outages on EX-series Switches
  - Understanding Storm Control on EX-series Switches

