

unit

Syntax unit *logical-unit-number* {
 family mpls ethernet-switching {
 native-vlan-id *vlan-id*;
 port-mode *mode*;
 vlan {
 members [(*names* | *vlan-ids*)];
 }
 }
 vlan-id *vlan-id-number*;
 }

Hierarchy Level [edit interfaces *ge-chassis/slot/port*]

Release Information Statement introduced in JUNOS Release 9.0 for EX-series switches.

Description Configure a logical interface on the physical device. You must configure a logical interface to be able to use the physical device.

Default You must configure a logical interface to be able to use the physical device.

Options *logical-unit-number*—Number of the logical unit.
 Range: 0 through 16,384

The remaining statements are explained separately.

Required Privilege Level interface—To view this statement in the configuration.
 interface-control—To add this statement to the configuration.

Related Topics ■ Configuring Interfaces on EX-series Switches (CLI Procedure)
 ■ Configuring Gigabit Ethernet Interfaces (J-Web Procedure)
 ■ *JUNOS Software Network Interfaces Configuration Guide* at
 <http://www.juniper.net/techpubs/software/junos/junos90/index.html>

