

use-string

Syntax	use-string <i>string</i> ;
Hierarchy Level	[edit ethernet-switching-options secure-access-port vlan (all <i>vlan-name</i>) dhcp-option82 remote-id] [edit forwarding-options helpers bootp dhcp-option82 remote-id] [edit forwarding-options helpers bootp interface <i>interface-name</i> dhcp-option82 remote-id]
Release Information	Statement introduced in JUNOS Release 9.3 for EX-series switches.
Description	Use a string rather than the MAC address of the host system (the default) in the remote ID value in the DHCP option 82 information.
Options	<i>string</i> —Character string used as the remote ID value. Range: 1–255 characters
Required Privilege Level	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
Related Topics	<ul style="list-style-type: none">■ Example: Setting Up DHCP Option 82 on an EX-series Switch with No Relay Agent Between Clients and DHCP Server■ Example: Setting Up DHCP Option 82 with an EX-series Switch as Relay Agent Between Clients and a DHCP Server■ Setting Up DHCP Option 82 on the Switch with No Relay Agent Between Clients and DHCP Server (CLI Procedure)■ Setting Up DHCP Option 82 with the Switch as a Relay Agent Between Clients and DHCP Server (CLI Procedure)■ [edit forwarding options] Configuration Statement Hierarchy■ RFC 3046, <i>DHCP Relay Agent Information Option</i>, at http://tools.ietf.org/html/rfc3046.

