

## Configuring the Mobile IP Authentication Method

---

You can configure Mobile IP to authenticate registration requests from mobile nodes by either the locally configured attributes or a AAA server. AAA server authentication is the default method.

To configure the Mobile IP authentication method:

- Specify either local or AAA authentication.

```
[edit services mobile-ip]  
user@host# set authenticate order local
```

- Related Topics**
- Configuring Mobile IP
  - authenticate

