

## Logging In to the JCS Management Module CLI

---

To log in to the JCS management module for the first time, use the default username and password:

Username: **USERID**

Password: **PASSWORD**

The 0 in **PASSWORD** is a zero, not the letter O.

When you have created user accounts, you can log in as a specific user.

- Related Topics**
- JCS Management Module CLI Overview
  - Getting Help on JCS Commands
  - Setting the JCS Management Module Command Target
  - Exiting the JCS Management Module CLI
  - Configuring User Accounts

