

## show mpls interface

---

**Syntax** show mpls interface

**Release Information** Command introduced in JUNOS Release 9.5 for EX-series switches.

**Description** Display information about MPLS-enabled interfaces. MPLS is enabled on an interface when the interface is configured with both the `set protocols mpls interface interface-name` and `set interfaces interface-name unit 0 family mpls` commands.

**Required Privilege Level** view

- Related Topics**
- Example: Configuring MPLS on EX-series Switches
  - Configuring MPLS on Provider Edge Switches (CLI Procedure)
  - Configuring MPLS on Provider Switches (CLI Procedure)

**List of Sample Output** show mpls interface on page 1

**Output Fields** Table 1 describes the output fields for the `show mpls interface` command. Output fields are listed in the approximate order in which they appear.

**Table 1: show mpls interface Output Fields**

Field Name	Field Description
Interface	Name of the interface.
State	State of the interface: Up or Dn (down).
Administrative groups	Administratively assigned colors of the link.

```
show mpls interface user@switch> show mpls interface
Interface  State      Administrative groups
so-1/0/0.0 Up         Blue Yellow Red
```

