

access-type

Syntax	access-type { (generic wimax); }
Hierarchy Level	[edit services mobile-ip], [edit logical-systems <i>logical-system-name</i> services mobile-ip], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> services mobile-ip], [edit routing-instances <i>routing-instance-name</i> services mobile-ip]
Release Information	Statement introduced in JUNOS Release 9.5.
Description	Configure the access type for Mobile IP
Default	The generic access type is used by default.
Options	The remaining statements are explained separately.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Topics	<ul style="list-style-type: none">■ Configuring Mobile IP■ Configuring the Access Type for Mobile IP

