

acknowledge-timer

Syntax	acknowledge-timer <i>milliseconds</i> ;
Hierarchy Level	[edit interfaces <i>interface-name</i> mlfr-uni-nni-bundle-options]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	For link services and voice services interfaces only, configure the maximum time, in milliseconds, to wait for an add link acknowledgment, hello acknowledgment, or remove link acknowledgment message.
Options	<p>milliseconds—Time, in milliseconds, to wait for an add link acknowledgment, hello acknowledgment, or remove link acknowledgment message.</p> <p>Range: 1 through 10 milliseconds</p> <p>Default: 4 milliseconds</p>
Usage Guidelines	See the <i>JUNOS Services Interfaces Configuration Guide</i> .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Topics	address, hello-timer

