

allow-any-vci

Syntax	allow-any-vci;
Hierarchy Level	[edit interfaces <i>interface-name</i> unit 0], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit 0]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	Dedicate entire ATM device to ATM cell relay circuit.
Usage Guidelines	See Configuring an ATM1 Cell-Relay Circuit.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

