

arp-inspection

Syntax	(arp-inspection no-arp-inspection);
Hierarchy Level	[edit ethernet-switching-options secure-access-port vlan (all <i>vlan-name</i>)]
Release Information	Statement introduced in JUNOS Release 9.0 for EX-series switches.
Description	<p>Perform dynamic ARP inspection on all VLANs or on the specified VLAN.</p> <ul style="list-style-type: none">■ arp-inspection—Enable ARP inspection.■ no-arp-inspection—Disable ARP inspection.
Default	Disabled.
Required Privilege Level	<p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>
Related Topics	<ul style="list-style-type: none">■ Example: Configuring Port Security, with DHCP Snooping, DAI, MAC Limiting, and MAC Move Limiting, on an EX-series Switch■ Example: Configuring DHCP Snooping, DAI , and MAC Limiting on an EX-series Switch with Access to a DHCP Server Through a Second Switch■ Example: Configuring DHCP Snooping and DAI to Protect the Switch from ARP Spoofing Attacks■ Enabling Dynamic ARP Inspection (CLI Procedure)■ Enabling Dynamic ARP Inspection (J-Web Procedure)

