

atm-scheduler-map

Syntax	atm-scheduler-map (<i>map-name</i> default);
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	Associate a scheduler map with a virtual circuit on a logical interface.
Options	<i>map-name</i> —Name of scheduler map that you define at the [edit interfaces <i>interface-name</i> atm-options scheduler-maps] hierarchy level. default—The default scheduler mapping.
Usage Guidelines	See Configuring ATM2 IQ VC Tunnel CoS Components.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Topics	scheduler-maps

