

authentication-key

Syntax	authentication-key <i>key</i> ;
Hierarchy Level	[edit interfaces <i>interface-name</i> sonet-options aps]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	Configure the Automatic Protection Switching (APS) authentication key (password).
Options	<i>key</i> —Authentication password. It can be 1 through 8 characters long. Configure the same key for both the working and protect routers.
Usage Guidelines	See Configuring SONET/SDH Physical Interface Properties.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Topics	For information about the authentication-key statement at the [edit interfaces <i>interface-name</i> unit <i>unit-number</i> family inet address <i>address</i> (vrrp-group vrrp-inet6-group) <i>group-number</i>] or [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>unit-number</i> family (inet inet6) address <i>address</i> (vrrp-group vrrp-inet6-group) <i>group-number</i>] hierarchy level, see the <i>JUNOS High Availability Configuration Guide</i> .

