

auto-negotiation

Syntax	(auto-negotiation no-auto-negotiation);
Hierarchy Level	[edit interfaces <i>interface-name</i> ether-options]
Release Information	Statement introduced in JUNOS Release 9.0 for EX-series switches.
Description	<p>Explicitly enable or disable autonegotiation.</p> <ul style="list-style-type: none">■ auto-negotiation—Enable autonegotiation.■ no-auto-negotiation—Disable autonegotiation. When autonegotiation is disabled, you must explicitly configure link mode and speed options.
Default	Autonegotiation is automatically enabled. No explicit action is taken after the autonegotiation is complete or if the negotiation fails.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Topics	<ul style="list-style-type: none">■ Configuring Gigabit Ethernet Interfaces (CLI Procedure)■ Configuring Gigabit Ethernet Interfaces (J-Web Procedure)■ <i>JUNOS Software Network Interfaces Configuration Guide</i> at http://www.juniper.net/techpubs/software/junos/junos95/index.html

