

backup-destination

Syntax	<code>backup-destination address;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> tunnel], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> tunnel]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	For tunnel interfaces, specify the remote address of the backup tunnel.
Options	<i>address</i> —Address of the remote side of the connection.
Usage Guidelines	See the <i>JUNOS Services Interfaces Configuration Guide</i> .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Topics	[Unresolved xref]

