

backup-options

| | |
|---------------------------------|--|
| Syntax | backup-options { interface <i>interface-name</i> ; } |
| Hierarchy Level | [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>] |
| Release Information | Statement introduced before JUNOS Release 7.4. |
| Description | <p>Configure an interface to be used as a backup interface if the primary interface goes down. This is used to support ISDN dial backup operation.</p> <p>The remaining statement is explained separately.</p> |
| Usage Guidelines | See Configuring ISDN Logical Interface Properties. |
| Required Privilege Level | interface—To view this statement in the configuration. interface-control—To add this statement to the configuration. |
| Related Topics | <i>J-series Services Router Basic LAN and WAN Access Configuration Guide</i> |

