

bridge-domain

Syntax	bridge-domain <i>name</i> ;
Hierarchy Level	[edit protocols oam ethernet connectivity-fault-management maintenance-domain routing-instances <i>name</i>]
Release Information	Statement introduced in JUNOS Release 9.4.
Description	Specify the OAM Ethernet CFM maintenance domain bridge domain.
Options	<i>name</i> —Specify the name of the bridge domain.
Usage Guidelines	See Configuring Maintenance Intermediate Points.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Topics	maintenance-domain

