

bridge-priority

Syntax	bridge-priority <i>priority</i> ;
Hierarchy Level	[edit protocols mstp], [edit protocols mstp msti <i>msti-id</i>], [edit protocols rstp], [edit protocols stp], [edit protocols vstp vlan <i>vlan-id</i>]
Release Information	Statement introduced in JUNOS Release 9.0 for EX-series switches. Statement updated in JUNOS Release 9.4 for EX-series switches to add VSTP support.
Description	Configure the bridge priority. The bridge priority determines which bridge is elected as the root bridge. If two bridges have the same path cost to the root bridge, the bridge priority determines which bridge becomes the designated bridge for a LAN segment.
Default	32,768
Options	<i>priority</i> —Bridge priority. It can be set only in increments of 4096. Range: 0 through 61,440 Default: 32,768
Required Privilege Level	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
Related Topics	<ul style="list-style-type: none">■ show spanning-tree bridge■ show spanning-tree interface■ Example: Configuring Network Regions for VLANs with MSTP on EX-series Switches■ Understanding MSTP for EX-series Switches■ Understanding VSTP for EX-series Switches

