

## **broadcast**

---

<b>Syntax</b>	<code>broadcast address;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> address <i>address</i> ]
<b>Release Information</b>	Statement introduced before JUNOS Release 7.4.
<b>Description</b>	Set the broadcast address on the network or subnet. On a subnet you cannot specify a host address of 0, nor can you specify a broadcast address.
<b>Default</b>	The default broadcast address has a host portion of all ones.
<b>Options</b>	<i>address</i> —Broadcast address. The address must have a host portion of either all ones or all zeros. You cannot specify the addresses 0.0.0.0 or 255.255.255.255.
<b>Usage Guidelines</b>	See Configuring the Interface Address.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

