

calling-number

Syntax	calling-number <i>number</i> ;
Hierarchy Level	[edit interfaces <i>br-pim/0/port</i> isdn-options]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	For J-series Services Routers only. For ISDN interfaces, configure the calling number to include in outgoing calls.
Options	<i>number</i> —Calling number.
Usage Guidelines	See Configuring ISDN Physical Interface Properties.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Topics	<i>J-series Services Router Basic LAN and WAN Access Configuration Guide</i>

