

circuit-type

Syntax circuit-type;

Hierarchy Level [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* system services dhcp-local-server authentication username-include],
[edit logical-systems *logical-system-name* routing-instances *routing-instance-name* system services dhcp-local-server group *group-name* authentication username-include],
[edit logical-systems *logical-system-name* system services dhcp-local-server authentication username-include],
[edit logical-systems *logical-system-name* system services dhcp-local-server group *group-name* authentication username-include],
[edit logical-systems *logical-system-name* routing-instances *routing-instance-name* system services dhcp-local-server authentication username-include],
[edit logical-systems *logical-system-name* routing-instances *routing-instance-name* system services dhcp-local-server group *group-name* authentication username-include],
[edit routing-instances *routing-instance-name* system services dhcp-local-server authentication username-include],
[edit routing-instances *routing-instance-name* system services dhcp-local-server group *group-name* authentication username-include],
[edit system services dhcp-local-server authentication username-include],
[edit system services dhcp-local-server group *group-name* authentication username-include]

Release Information Statement introduced in JUNOS Release 9.1.

Description Specify that the circuit type is concatenated with the username during the subscriber authentication process.

Required Privilege Level system—To view this statement in the configuration.
system-control—To add this statement to the configuration.

Related Topics ■ Using External AAA Authentication Services with DHCP

