

class

Syntax	class <i>class-name</i> queue-num <i>queue-number</i> ;
Hierarchy Level	[edit class-of-service forwarding-classes]
Release Information	Statement introduced in JUNOS Release 9.0 for EX-series switches.
Description	Configure up to 16 forwarding classes with multiple forwarding classes mapped to single queues. If you want to configure up to eight forwarding classes with one-to-one mapping to output queues, use the queue statement instead of the class statement at the [edit class-of-service forwarding-classes] hierarchy level.
Options	<p><i>class-name</i> —Name of forwarding class..</p> <p>queue-num <i>queue-number</i> —Output queue number. Range: 0 through 15.</p>
Required Privilege Level	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
Related Topics	<ul style="list-style-type: none">■ Example: Configuring CoS on EX-series Switches■ Defining CoS Forwarding Classes (CLI Procedure) or Defining CoS Forwarding Classes (J-Web Procedure)■ Understanding CoS Forwarding Classes

