

clocking-mode

Syntax	clocking-mode (dce internal loop);
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	For EIA-530 and V.35 interfaces, configure the clock mode. You cannot configure clocking-mode dce on a DTE router using an X.21 serial line protocol (detected automatically when an X.21 cable is plugged into the serial interface).
Options	<p>dce—DCE timing (DTE mode only, not valid for X.21).</p> <p>internal—Internal baud timing.</p> <p>loop—Loop timing.</p> <p>Default: loop</p>
Usage Guidelines	See Configuring the Serial Clocking Mode.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration
Related Topics	Configuring the Serial Clocking Mode

