

control-polarity

Syntax	control-polarity (negative positive);
Hierarchy Level	[edit interfaces <i>interface-name</i> serial-options]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	For X.21 interfaces only, configure the control signal polarity.
Options	positive—Positive signal polarity. negative—Negative signal polarity. Default: positive
Usage Guidelines	See Configuring Serial Signal Polarities.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

