

## control-signal

---

<b>Syntax</b>	control-signal (assert   de-assert   normal);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> serial-options dce-options], [edit interfaces <i>interface-name</i> serial-options dte-options]
<b>Release Information</b>	Statement introduced before JUNOS Release 7.4.
<b>Description</b>	For X.21 interfaces only, configure the to-DCE signal.
<b>Options</b>	<p>assert—The to-DCE signal must be asserted.</p> <p>de-assert—The to-DCE signal must be deasserted.</p> <p>normal—Normal request-to-send (RTS) signal handling, as defined by ITU-T Recommendation X.21.</p> <p><b>Default:</b> normal</p>
<b>Usage Guidelines</b>	See Configuring the Serial Signal Handling.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

