

core-dump

Syntax	(core-dump no-core-dump);
Hierarchy Level	[edit interfaces <i>mo-fpc/pic/port</i> multiservice-options]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	<p>For monitoring services interfaces only, a useful tool for isolating the cause of a problem. Core dumping is enabled by default. The directory <code>/var/tmp</code> contains core files. The JUNOS software saves the current core file (0) and the four previous core files, which are numbered 1 through 4 (from newest to oldest):</p> <ul style="list-style-type: none">■ core-dump—Enable the core dumping operation.■ no-core-dump—Disable the core dumping operation.
Usage Guidelines	See Configuring Multiservice Physical Interface Properties or the <i>JUNOS Services Interfaces Configuration Guide</i> .
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

