

cts-polarity

| | |
|---------------------------------|---|
| Syntax | cts-polarity (negative positive); |
| Hierarchy Level | [edit interfaces <i>interface-name</i> serial-options] |
| Release Information | Statement introduced before JUNOS Release 7.4. |
| Description | Configure CTS signal polarity. |
| Options | positive—Positive signal polarity. negative—Negative signal polarity. Default: positive |
| Usage Guidelines | See Configuring Serial Signal Polarities. |
| Required Privilege Level | interface—To view this statement in the configuration. interface-control—To add this statement to the configuration. |

