

## dcd

---

<b>Syntax</b>	dcd (ignore   normal   require);
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> serial-options dce-options], [edit interfaces <i>interface-name</i> serial-options dte-options]
<b>Release Information</b>	Statement introduced before JUNOS Release 7.4.
<b>Description</b>	For EIA-530 and V.35 interfaces only, configure the from-DCE signal, data-carrier-detect (DCD).
<b>Options</b>	ignore—The from-DCE signal is ignored.  normal—Normal DCD signal handling as defined by the TIA/EIA Standard 530.  require—The from-DCE signal must be asserted. <b>Default:</b> normal
<b>Usage Guidelines</b>	See Configuring the Serial Signal Handling.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

