

## deactivation-delay

---

<b>Syntax</b>	deactivation-delay <i>seconds</i> ;
<b>Hierarchy Level</b>	[edit interface <i>dl</i> <i>n</i> unit <i>logical-unit-number</i> dialer-options]
<b>Release Information</b>	Statement introduced before JUNOS Release 7.4.
<b>Description</b>	(J-series Services Routers) For ISDN interfaces, configure the ISDN deactivation delay. Used only for dialer backup and dialer watch cases.
<b>Options</b>	<i>seconds</i> —Interval before the backup interface is deactivated after the primary interface has comes up. <b>Range:</b> 1 through 4294967295 seconds <b>Default:</b> 0 (zero)
<b>Usage Guidelines</b>	See Configuring ISDN Logical Interface Properties.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Topics</b>	<i>J-series Services Router Basic LAN and WAN Access Configuration Guide</i>

