

default-pap-password

Syntax	default-pap-password <i>password</i> ;
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options pap], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ppp-options pap]
Release Information	Statement introduced in JUNOS Release 8.3.
Description	For PAP authentication, the default PAP password.
Usage Guidelines	See Configuring PPP PAP Authentication.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Topics	access-profile

