

## default-value

---

<b>Syntax</b>	default-value <i>default-value</i> ;
<b>Hierarchy Level</b>	[edit dynamic-profiles <i>profile-name</i> variables <i>variable-name</i> ]
<b>Release Information</b>	Statement introduced in JUNOS Release 9.3.
<b>Description</b>	Configure a default value for a user-defined variable in a dynamic profile. The values that the system uses for these variables are applied when the subscriber authenticates.
<b>Options</b>	<i>default-value</i> —Default value for the variable.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Topics</b>	■ <a href="#">Configuring User-Defined CoS Variables in a Dynamic Service Profile</a>

