

delimiter

Syntax `delimiter delimiter-character;`

Hierarchy Level [edit forwarding-options dhcp-relay authentication username-include],
[edit forwarding-options dhcp-relay group *group-name* authentication username-include],
[edit logical-systems *logical-system-name* forwarding-options dhcp-relay authentication username-include],
[edit logical-systems *logical-system-name* forwarding-options dhcp-relay group *group-name* authentication username-include],
[edit logical-systems *logical-system-name* routing-instances *routing-instance-name* forwarding-options dhcp-relay authentication username-include],
[edit logical-systems *logical-system-name* routing-instances *routing-instance-name* forwarding-options dhcp-relay group *group-name* authentication username-include],
[edit routing-instances *routing-instance-name* forwarding-options dhcp-relay authentication username-include],
[edit routing-instances *routing-instance-name* forwarding-options dhcp-relay group *group-name* authentication username-include]

Release Information Statement introduced in JUNOS Release 9.1.

Description Specify the character used as the delimiter between the concatenated components of the username. You cannot use the semicolon (;) as a delimiter.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Topics ■ Using External AAA Authentication Services with DHCP

