

description

| | |
|---------------------------------|---|
| Syntax | <code>description <i>text-description</i>;</code> |
| Hierarchy Level | [edit vlans <i>vlan-name</i>] |
| Release Information | Statement introduced in JUNOS Release 9.0 for EX-series switches. |
| Description | Provide a textual description of the VLAN. The text has no effect on the operation of the VLAN or switch. |
| Options | <i>text-description</i> —Text to describe the interface. It can contain letters, numbers, and hyphens (-) and can be up to 255 characters long. If the text includes spaces, enclose the entire text in quotation marks. |
| Required Privilege Level | routing—To view this statement in the configuration. routing-control—To add this statement to the configuration. |
| Related Topics | <ul style="list-style-type: none">■ show vlans■ Example: Setting Up Basic Bridging and a VLAN for an EX-series Switch■ Understanding Bridging and VLANs on EX-series Switches |

