

description

Syntax	<code>description text;</code>
Hierarchy Level	[edit interfaces <i>interface-name</i>], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i>]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	Provide a textual description of the interface or the logical unit. Any descriptive text you include is displayed in the output of the show interfaces commands, and is also exposed in the ifAlias Management Information Base (MIB) object. It has no effect on the operation of the interface or the routing platform.
Options	<i>text</i> —Text to describe the interface. If the text includes spaces, enclose the entire text in quotation marks.
Usage Guidelines	See Adding an Interface Description to the Configuration and Adding a Logical Unit Description to the Configuration.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

