

## device-count

---

<b>Syntax</b>	device-count <i>number</i> ;
<b>Hierarchy Level</b>	[edit chassis aggregated-devices ethernet]
<b>Release Information</b>	Statement introduced in JUNOS Release 9.0 for EX-series switches. Range updated in JUNOS Release 9.5 for EX-series switches.
<b>Description</b>	Configure the number of aggregated logical devices available to the switch.
<b>Default</b>	There is no default. You must configure a value.
<b>Options</b>	<i>number</i> —Maximum number of Ethernet logical interfaces on the switch. <b>Range:</b> 0 through 127 for EX 3200 and EX 4200 switches; 0 through 254 for EX 8200 series switches
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Topics</b>	<ul style="list-style-type: none"><li>■ Example: Configuring Aggregated Ethernet High-Speed Uplinks Between a Virtual Chassis Access Switch and a Virtual Chassis Distribution Switch</li><li>■ Configuring Aggregated Ethernet Interfaces (CLI Procedure)</li><li>■ <i>JUNOS Software Network System Basics Configuration Guide</i> at <a href="http://www.juniper.net/techpubs/software/junos/junos95/index.html">http://www.juniper.net/techpubs/software/junos/junos95/index.html</a></li></ul>

---

Published: 2009-09-22