

dial-string

Syntax	dial-string [<i>dial-string-numbers</i>];
Hierarchy Level	[edit interfaces br-pim/0/port unit <i>logical-unit-number</i> dialer-options], [edit logical-systems <i>logical-system-name</i> interfaces br-pim/0/port unit <i>logical-unit-number</i> dialer-options]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	(J-series Services Routers) For ISDN interfaces, specify one or more ISDN dial strings used to reach a destination subnetwork.
Options	<i>dial-string-numbers</i> —One or more strings of numbers to call.
Usage Guidelines	See Configuring ISDN Logical Interface Properties.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Topics	<i>J-series Services Router Basic LAN and WAN Access Configuration Guide</i>

